

Flexi-Coil Meter Housing Installation


To ensure a proper seal, make sure the mounting plate is smooth and clean.

Remove the old spacer bolts. No spacer bolts needed on our meter housing with preinstalled spacers at each corner.


Spacer Plates

Install spacer plates behind the sensor.


This applies to meter housings FAS0931A, JAS2771A, and JAS2774A.

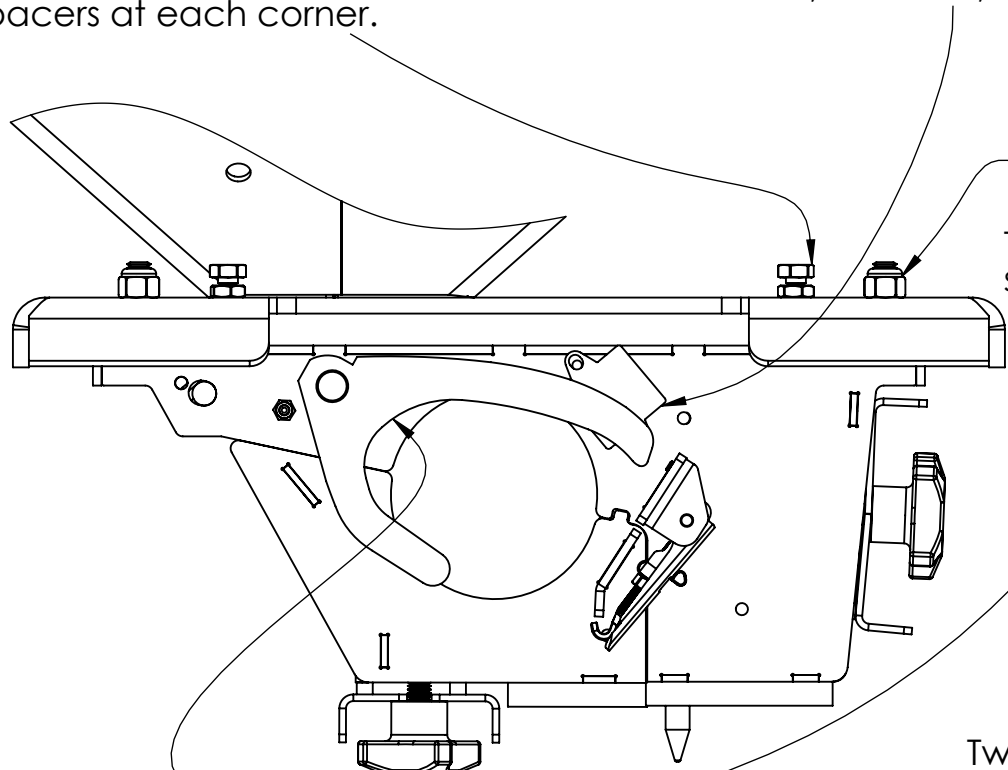

Tighten till plate sits snug on spacers.

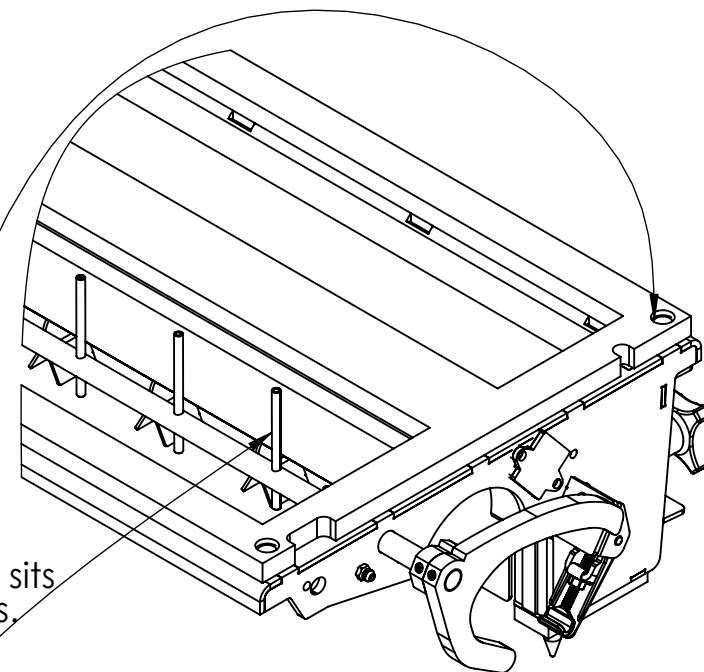

Warning: Do not over torque
Torque to 45 In-lbs

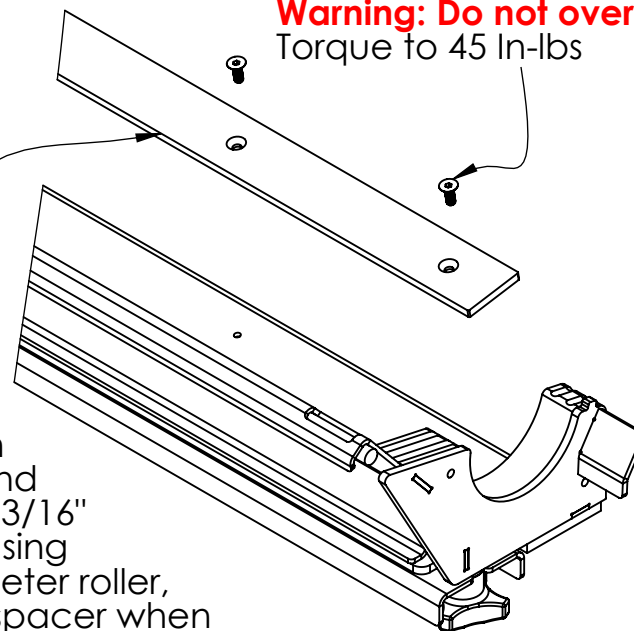

Two different spacer plates are included in the kit (3/16" and 5/16"). Use the 3/16" spacer when using the large diameter roller, and the 5/16" spacer when using the smaller diameter roller.

Agitator Fork Installation

With long side of agitator fingers pointing up, center agitator fork over the meter roll and tighten fork to the agitator rod.

IMPORTANT: APPLY ANTISEIZE TO ALL THREADED STAINLESS STEEL SURFACES TO PREVENT COLD WELD!