


# Flexi-Coil Meter Housing Installation

To ensure a proper seal, make sure the mounting plate is **smooth** and **clean**.

Remove the old spacer bolts.  
No spacer bolts needed on our meter housing with preinstalled spacers at each corner.

Tighten till plate sits snug on spacers.

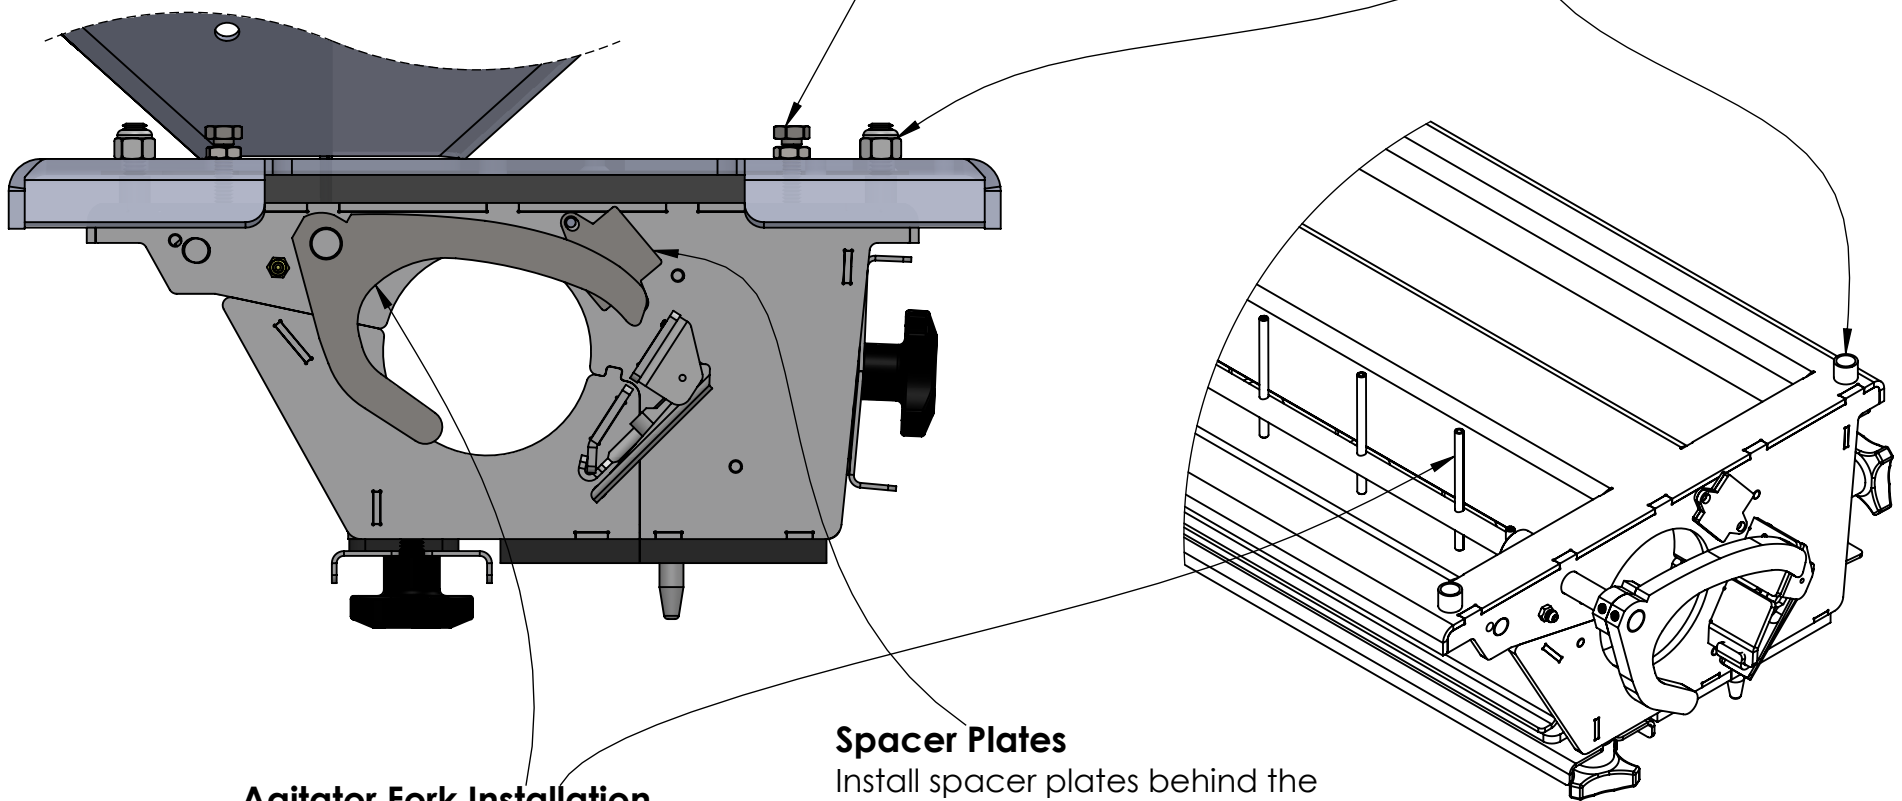

## Agitator Fork Installation

With long side of agitator fingers pointing up, center agitator fork over the meter roll and tighten fork to the agitator rod.

## Spacer Plates

Install spacer plates behind the sensor.

This applies to meter housings FAS0931A, JAS2771A, and JAS2774A.

**IMPORTANT: APPLY ANTISIEZE TO ALL THREADED STAINLESS STEEL SURFACES TO PREVENT COLD WELD!**